
10 MOTD



Stretch Systems for Walls & Ceilings

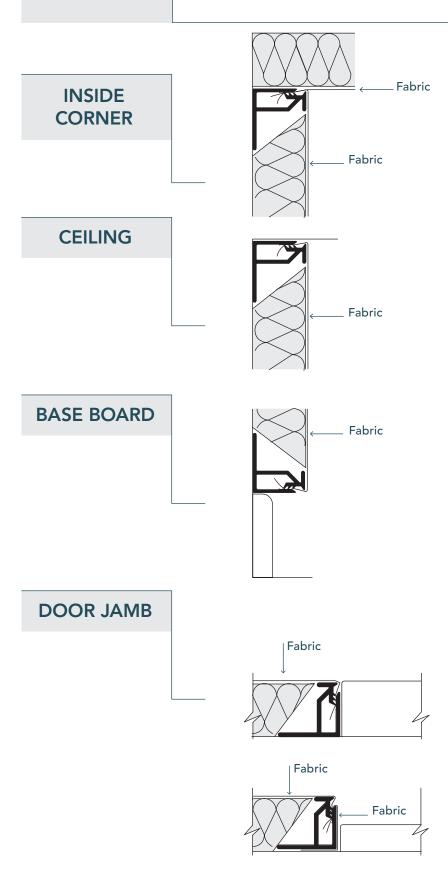

DETAILS

DEPTH: 1"

LOAD: Top Load. The fabric is tucked into the track from the top down.

USAGE: Perimeter track. Use at windows, doors, floors, corners and ceilings.

EDGE: Square

EDGE WRAPPING:

Only required when the edge is exposed.