
## **50** MOTD

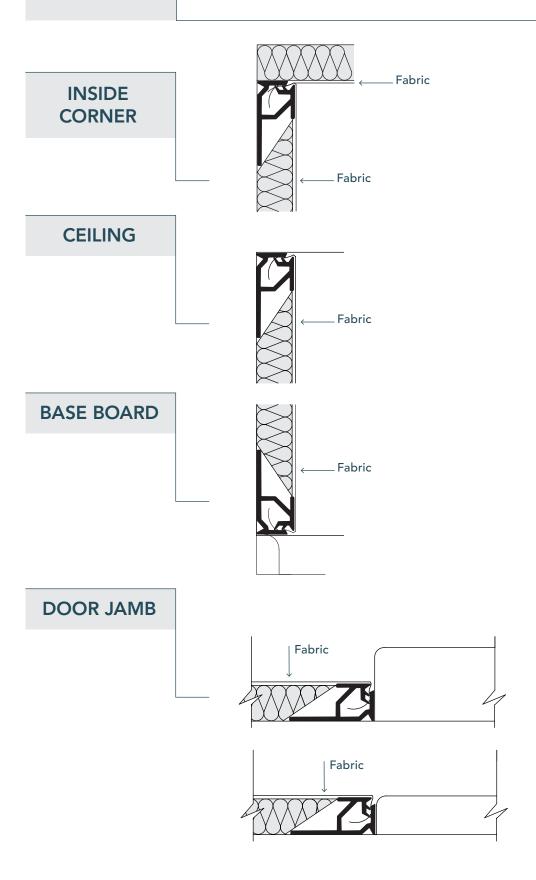

## **DETAILS**

**DEPTH: 1/2"** 

LOAD: Top Load. The fabric is tucked into the track from the top down.

USAGE: Perimeter track. Use at windows, doors, floors, corners and ceilings.

**EDGE: Square** 

## **EDGE WRAPPING:**

Only required when the edge is exposed.

Note: When using thick fabrics hold track off the opposing wall or ceiling the thickness of the fabric to allow tucking.