
10 COTD



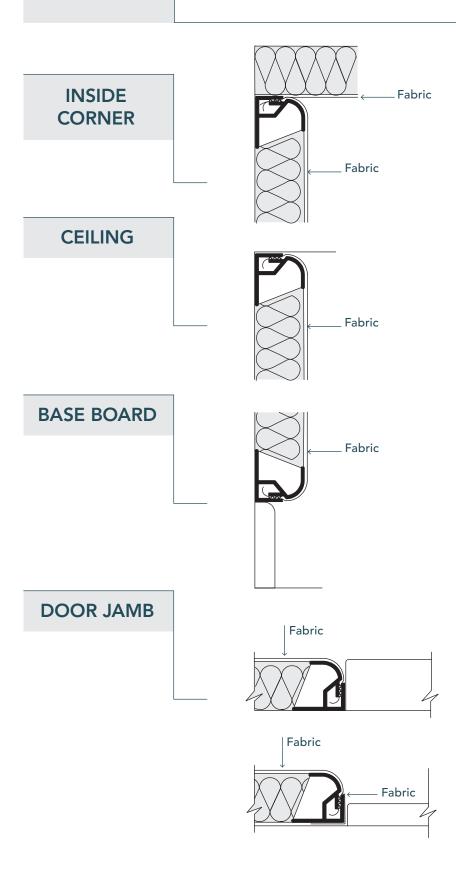

DETAILS

DEPTH: 1"

LOAD: Top Load. The fabric is tucked into the track from the top down.

USAGE: Perimeter track. Use at windows, doors, floors, corners and ceilings.

EDGE: Radius

EDGE WRAPPING:

Only required when the edge is exposed.

Note: When using thick fabrics hold track off the opposing wall or ceiling the thickness of the fabric to allow tucking.