
## **50** MOBL

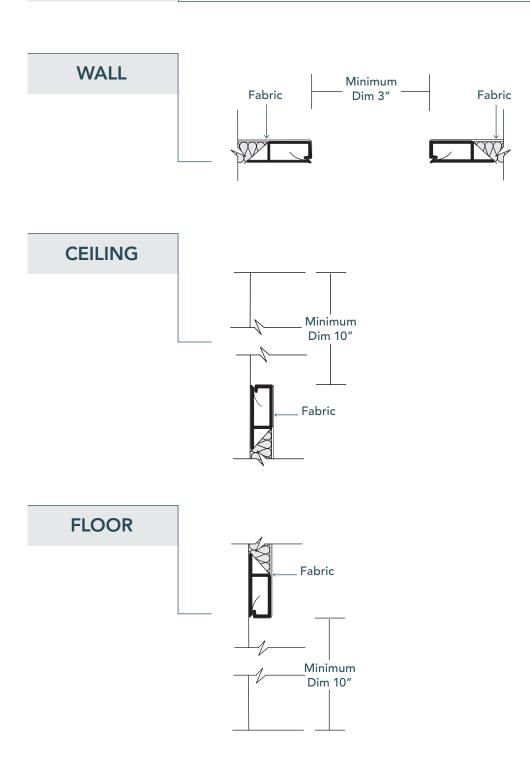

## **DETAILS**

**DEPTH: 1/2"** 

LOAD: Bottom
Load. Fabric is
wrapped around
the track and
tucked along the
bottom edge,
parallel with the
wall or ceiling. This
track does not
require edge
wrapping.

USAGE: Perimeter track. Use to install stand-alone applique type panels and installations with exposed edges. Make sure there is sufficient space to allow for tucking the fabric along the bottom edge.

**EDGE: Square** 

EDGE WRAPPING: Not Required.